
# ozone DSP24<sup>240</sup>

24" 240 HZ GAMING MONITOR

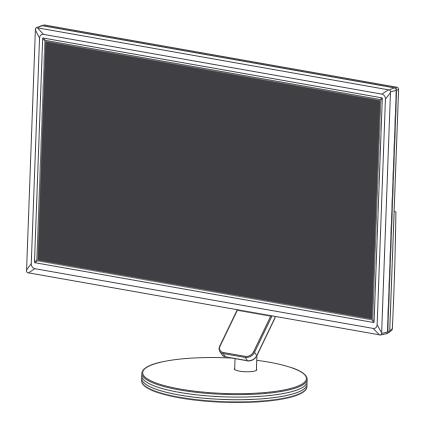

**USER MANUAL** 

3

#WithinTheGame

#### INPUT VOLTAGE

AC 100-240V - 50/60Hz DC12V===4A

#### KEYS FUNCTION

#### KEY FUNCTION

**EXIT** - Exit from any options window

- - Move down on the menu
- + Move up on the menu

MENU - Select a menu

POWER - Power on/off

#### VIDEO SOURCE SELECTION

To select the desired signal ("Auto Select", "Display port", "HDMI 1" or "HDMI 2" press the button "+" or "-" to select the desired input. Press "MENU" to confirm).

#### TECHNICAL SPECS

**Resolution** 1920 x 1080 px

Dimensions 565 x 395-530 x 130 mm Without stand 565 x 335 x 42.6 mm

Net weight 5 Kg Gross weight 6.2 Kg

Included cables 1x 12V Adapter; 1x HDMI; 1x Display Port

#### CONNECTIVITY













DC IN

USB PORT

**HDMI 1.4** 

HDMI 2.0

DISPLAY PORT AUDIO OUT

# CE STATEMENT OF COMPLIANCE WITH EUROPEAN UNION DIRECTIVES

Ozone declares that this product is in compliance with the essential requirements and other relevant provisions from the following Directive: 2014/30/EU, as applicable. The technical documentation required by the Conformity Evaluation process is in Ozone's possession and can be requested through info@ozonegaming.com



# DISPOSAL OF BATTERIES AND ELECTRICAL OR ELECTRONIC EQUIPMENT WASTE

The existence of this symbol on the product, batteries or respective packaging, signifies that this product and the contained batteries can not be disposed as domestic waste.

It is the user's responsibility to deliver this product at a batteries, electrical or electronic recycling pick-up point.

The pick-up and separate recycling contributes for the preservation of natural resources and suppresses potential negative consequences for the human health and the environment resultant of inadequate disposal of dangerous substances contained in batteries and electrical or electronic equipment. For additional informations regarding batteries, electrical or electronic recycling pick-up points, please contact your local municipal services.

#### WARRANTY

### Who does the warranty protect:

This warranty is valid for the original purchaser only.

## What does the warranty protect:

For warranty claims, please contact Ozone's overseas distribution partners in your country. Find the distribution partner list at www.ozonegaming.com Warranty: 2 years from the purchasing date. (Depending on the laws of each country)

URL: www.ozonegaming.com

E-mail: support@ozonegaming.com

Ozone reserves the right for any modifications in text and/or images.

## What does not the warranty cover:

1. Any product, on which the serial number has been defaced, modified or removed.

- 2. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
- 3. Repair or attempted repair by anyone not authorized by Ozone Gaming.
- 4. Damage to or loss of any programs, data or removable storage media.
- 5. Software or data loss occurring during repair or replacement.
- 6. Any damage of the product due to shipment.
- 7. Removal or installation of the product.
- 8. External causes, such as electric power fluctuations or failure.
- 9. Use of supplies or parts not meeting Ozone Gaming's specifications.
- 10. Normal wear and tear.
- 11. Any other cause which does not relate to a product defect.

If you have any questions regarding technical problems, please contact us via our website: www.ozonegaming.com

Ozone reserves the right for any modifications in text and/or images.

#### LCD MONITOR PIXEL POLICY

Panel manufacturers set limits as to how many defective dots (or sub-pixels) are deemed to be acceptable on any LCD panel.

Ozone's manufacturer warranty covers any defects that exceed the defect specifications described in this document.

LCD displays are made of pixels. Each pixel is made up of a red, green and blue sub-pixel, each sub pixel are driven by an individual transistor. If a transistor becomes defective, the corresponding dot may be permanently light (bright) or may not light (dark). Independently of the brand and the manufacturer, it is common for one or more sub-pixels to become fixed in an unchanging state. The defective pixel/sub-pixel phenomenon is as follows:

- (1) Color white a bright sub-pixel (always ON)
- (2) Color black a dark sub-pixel (always OFF)
- (3) Color red, green or blue a stuck sub-pixel (always ON or always OFF)

The specifications for the number of defects that are deemed to be acceptable for the specified size of LCD panel is:

Panel Type	Native resolution	Bright Sub-pixel	Dark Sub-pixel	Total allowable Sub-pixel
Full HD (FHD)	1920x1080 (1080p)	3	3	5

**NOTE:** Specification is subject to change without notice and may vary from different regions.

#### WARNING





TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that the interference will not occur in a particular installation.

#### IMPORTANT SAFETY INSTRUCTIONS

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this product near water.
- 6. Clean only with and soft cloth.
- Do not block any ventilation openings.
  Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or any other apparatus (including amplifiers) that produces heat.
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

#### IMPORTANT SAFETY INSTRUCTIONS

- 11. Only use attachments/accessories specified by the manufaturer.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the unit. When a cart is used, use caution when moving the cart/monitor combination to avoid injury from tip-over.



- 13. Unplug this product during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as powersupply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally. or has been dropped.
- 15. Do not expose this product to dripping or splashing and ensure that no objects fill with liquids, such as vases, are placed on the unit.



#WithinTheGame

www.ozonegaming.com